

1. Using a 10mm T-Handle or socket, remove the bolts on the center portion of the OEM skid plate and remove plate. (FIG 1)
 2. Using a 12mm T-Handle or socket, remove the two side plastic engine guards. There are two bolts on each side. Remove both plastic engine guards. (FIG 2 & 3)
- If you ordered a linkage guard with the skid plate. Now would be the time to install the linkage guard before installing the skid plate to the bike.
3. Install the foam adhesive from the skid plate packaging to the frame rails.
 4. Line up the new aluminum skid plate up to the frame so that the mounting holes line up with the tabs on the frame. (FIG 4)
 5. Starting with the rear mounting hole, thread in one of the provided M6x16 bolts. Leave loose for now. (FIG 5)
 6. Moving forward by rocking the skid plate into place, thread in two more of the provided M6x16 bolts in the front two mounting hole locations. Leave loose for now. (FIG 6)
 7. Thread in the last two provided M6x16 bolts in the center two mounting holes. (FIG 7)
 8. Using an 8mm T-Handle or socket, tighten all 5 bolts installed in steps 5-7.
 9. Have Fun and enjoy your next ride.



FIG 1



FIG 2



FIG 3



FIG 4

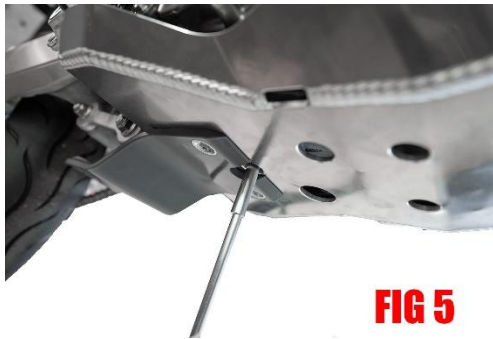


FIG 5



FIG 6



FIG 7

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgement in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI Products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing as product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and the Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.

SKID PLATE INSTALLATION INSTRUCTIONS

24-3000



enduroeng.com//517.393.2421//info@enduroeng.com