
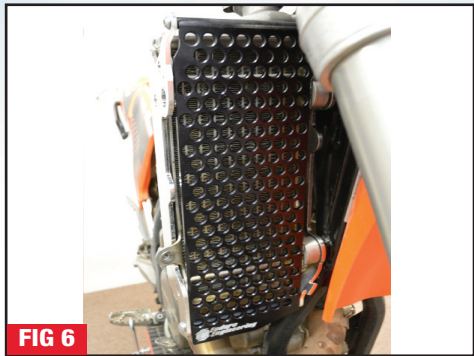
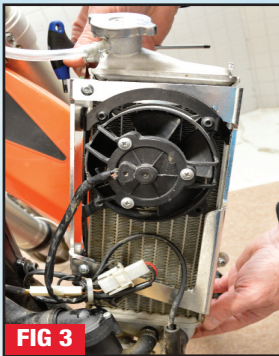
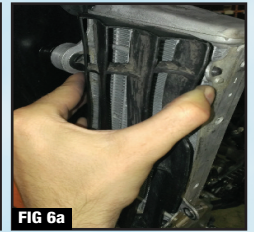
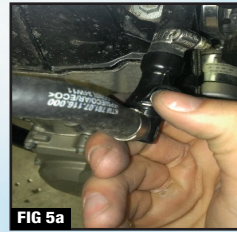
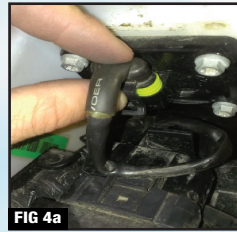
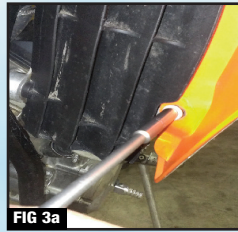
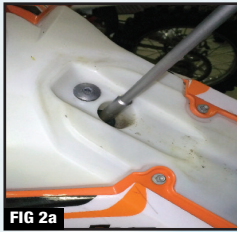


EE Radiator Guards Installation Instructions

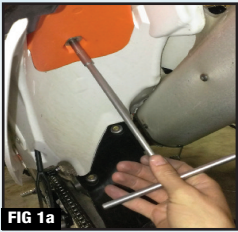

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty.) EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose. R.JR.FSec.randt.warninganddisclaimer. 5 2 08

Note: Installation of this product requires the use of Enduro Engineering 11-114 radiator braces.

- Follow steps 1a thru 7a of the 11-114 Radiator Brace installation instructions if you are installing the 11-114 Radiator Brace at the same time as the 12-114 Radiator Guards.

11-114 Radiator Brace installation instructions

- Using an 8mm t-handle or socket remove the seat bolt and seat. (Fig 1a)
- Using an 8mm t-handle or socket remove the rear gas tank bolt. (Fig 2a)
- Using an 8mm t-handle or socket remove the left & right shroud bolts. (Fig 3a)
- (Only for fuel injection models) remove the fuel pump wire harness. (Fig 4a)
- Disconnect the fuel line from the carburetor or throttle body. (Fig 5a)
- Remove the gas tank and shrouds.
- Push the plastic radiator louvers toward the outside of the bike and remove them from the front of the radiators. (Fig 6a)

- Using an 8mm t-handle or socket remove both radiator mounting bolts from each radiator.
- Using a 6mm t-handle or socket, loosen both of the upper radiator hose connections. (Fig. 1)
- Pull the right side radiator out of the upper hose connection. (NOTE: Do not loosen or remove any of the lower hoses. This way you will only lose a small amount of coolant.) Move the radiator slightly away from the bike. This will give you the clearance you will need between the frame and radiator to mount the Radiator Guards.
- If the bike already has EE radiator braces installed you will need to use a 4mm Allen wrench to remove the black support rods from the radiator brace. (Fig. 2) If the bike did not have EE radiator braces installed you will need to install the right side brace (without the black support rods) around the right radiator. (Fig. 3)

- Using the supplied 6 x 16mm button head bolts, attach the right radiator guard (Fig. 4) to the right radiator brace as shown in (Fig. 5)
- Install the right radiator with brace and guard back on the bike. (Fig. 6) Remember to tighten the upper hose clamp.
- Repeat steps 4 thru 7 for the left side guard.
- Check coolant level and top off as needed.
- Install gas tank and shrouds. Connect fuel line. Plug fuel pump in (if fuel injected).
- Install seat.



QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS

EE Radiator Guards

Part# 12-114